

アコースティックピアノ年代・製造番号別一覧

製造年代	製造番号
1900	製造開始
1926	10000
1934	20000
1938	30000
1947	40000
1952	50000
1954	60000
1956	70000
1957	80000
1958	90000
1959	100000
1960	120000
1961	150000
1962	180000
1963	230000
1964	300000
1965	370000
1966	460000
1967	570000
1968	700000
1969	820000
1970	980000
1971	1150000
1972	1340000
1973	1540000
1974	1740000
1975	1950000
1976	2150000
1977	2360000
1978	2570000
1979	2800000
1980	3030000
1981	3260000
1982	3480000
1983	3680000

製造年代	製造番号
1984	3890000
1985	4040000
1986	4210000
1987	4360000
1988	4560000
1989	4680000
1990	4820000
1991	4960000
1992	5080000
1993	5190000
1994	5300000
1995	5390000
1996	5460000
1997	5520000
1998	5590000
1999	5810000
2000	5860000
2001	5920000
2002	5970000
2003	6020000
2004	6060000
2005	6100000
2006	6150000
2007	6180000
2008	6220000
2009	6250000
2010	6280000
2011	6310000
2012	6340000
2013	6360000
2014	6380000
2015	6400000
2016	6420000
2017	6440000
2018	6460000